




THE VERSATILE OPTION FOR BOTH TENSIONING AND TRANSPORTING.

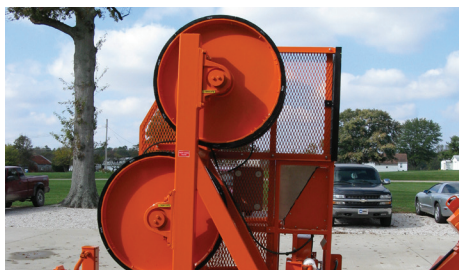

EASY OPERATION WITH USER CONTROLLED PANEL

The reel and spindle assembly lifts straight out of the machine without having to shift to the side. No tools required for reel removal.

With corrosion resistant steel brake discs, you will get standard smooth operation and low maintenance.



All unit operating controls are located at the operator's station, off the ground, for operator safety. The fairlead roller assembly is provided as standard between bullwheel and reel. Unit is designed with canted bullwheels to reduce twist on conductor.



FEATURES

EASY LIFT REEL SPINDLES FOR REPLACEMENT


CANTED BULLWHEELS FOR TWIST REDUCTION

FAIRLEAD ROLLER ASSEMBLY PROVIDED

46038-18R

T-BWT-4-38-RC SPECIFICATIONS

| STANDARD FEATURES | |
|------------------------|---|
| Tension Brakes | Hydraulically actuated 28" diameter caliber |
| Reel Brakes | Hydraulically actuated 20" diameter caliber |
| Front Hitch | Adjustable 3" lunette eye |
| Lighting | DOT regulation LED |
| Electrical Plug | 6 way pin |
| Jacks | Front & Rear manual |
| Tires | 215/75/R17.5 Load Range "H" |
| Axle | Tandem 8,000 lb. capacity |
| Suspension | Leaf spring |
| Brakes | Electric with breakaway switch |
| Tie Downs | Front and rear mounted |
| Grounding | Mounted front and rear lugs |
| Wheel Chocks | Standard |
| UNIT PERFORMANCE | |
| Maximum Tension Rating | 4,000 lbs. |
| Line Speed | 4 mph. |
| BULLWHEEL TENSIONER | |
| Diameter | 37" (bottom of groove) |
| Groove Diameter | 1.50" |
| Number of Grooves | 5 |
| Replacement Segments | Yes |
| Bullwheel Lining | Elastomer (bolt on) |
| REEL CARRIER | |
| Quantity | 1 |
| Max. Reel Diameter | 90" |
| Max. Reel Width | 56" |
| Max. Reel Weight | 10,000 lbs. |
| Spindle Diameter | 2 3/4" complete with locking collars |
| DIMENSIONS & WEIGHT | |
| L X W X H | 19' x 8' x 9'4" |
| Net Weight | 6,100 lbs. |
| GVWR | 18,200 lbs. |
| GAWR | 16,000 lbs. |
| Tongue Weight | 2,260 lbs. |

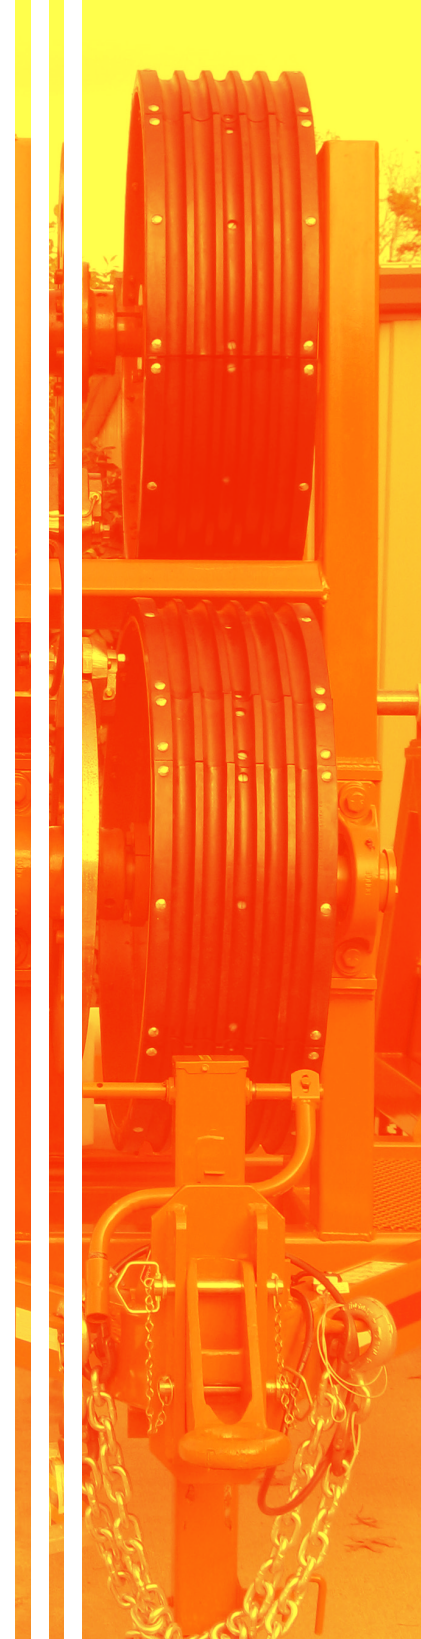

EQUIPPED LOCATIONS NATIONWIDE

All equipment is available for purchase and rental through our five locations across the USA. We want to be prepared for all of your demands because we are dedicated to helping the industry whenever you need it.

ASSEMBLED IN THE USA

All Wagner-Smith Equipment Co. equipment are assembled in our state-of-the-art facilities in Lawrenceville, IL and Burleson, TX. Replacement parts are quickly fulfilled from our Burleson, TX location and shipped to anywhere in North America.

*Wagner-Smith Equipment Co. reserves the right to change the specification of any unit at any time without prior notice. This spec sheet is only a statement of general specifications on the date of this publication.

To learn more or find a location nearest you, please visit WagnerSmith.com



**Wagner
Smith**
Equipment Co.

46038-18R

REV. 2023